

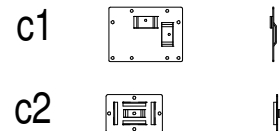






Evokit cartongesso - Evokit placo - Evokit p.board - Evokit pladur



IT - ISTRUZIONI MONTAGGIO CONTROTELAIO EVOKIT CARTONGESSO
EN - SET UP INSTRUCTIONS POCKET SLIDING SYSTEM EVOKIT P.BOARD
FR - INSTRUCTIONS MONTAGE CONTRE-CHASSIS EVOKIT PL. DE PLATRE
ES - INSTRUCCIONES DE MONTAJE ARMAZON EVOKIT PLADUR
FI - EVOKIT-LIUKUOVIJÄRJESTELMÄN ASENNUSOHJE KIPSILEVYSEINÄLLE
DK - MONTAGE VEJLEDNING INDBYGG PRO EVOKIT - 1 LAG GIBS

Evokit 100-125

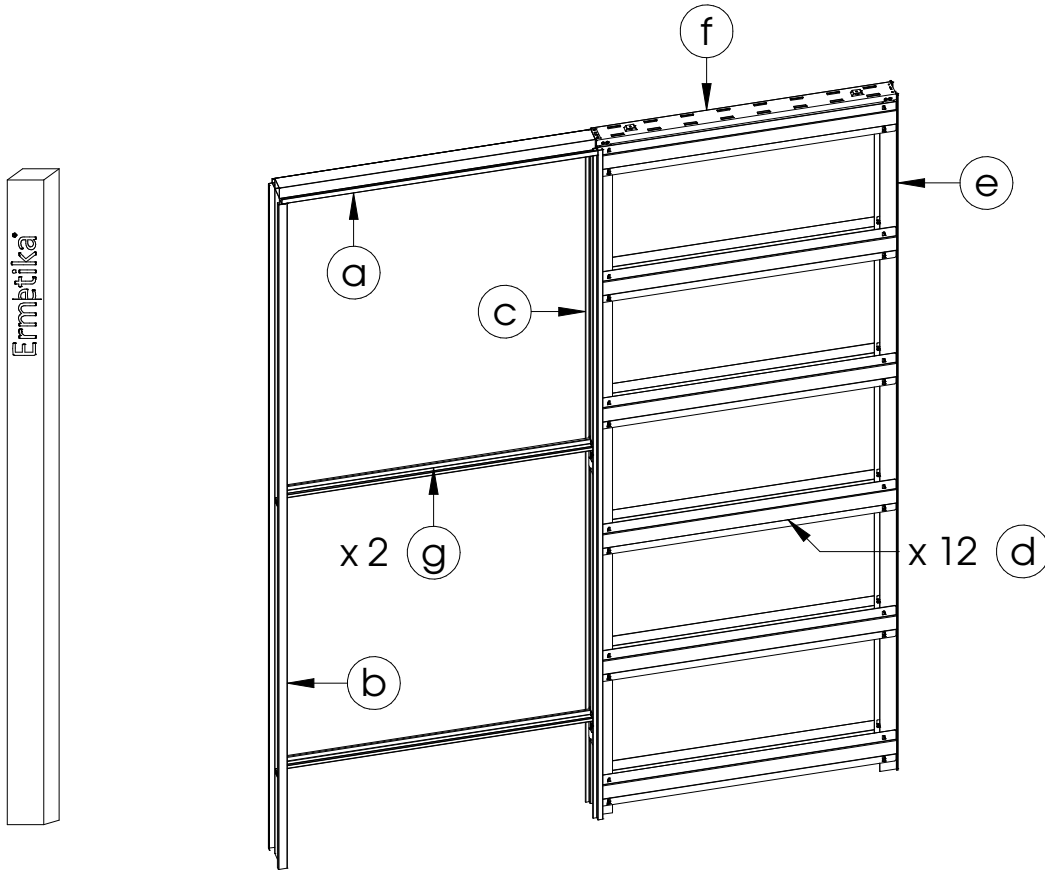


Ermätika x 1
 Kit carrello
 Track kit
 Kit chariot
 Kit carros

k x 4
 v2 = n° 8x 3,9x9,5
 "Til evokit 125:"

v3 = n° 8x 4,8x9,5
 v5 = n° 2x 3,5x25
 v1 = n° 60x 3,9x19


Evokit 100

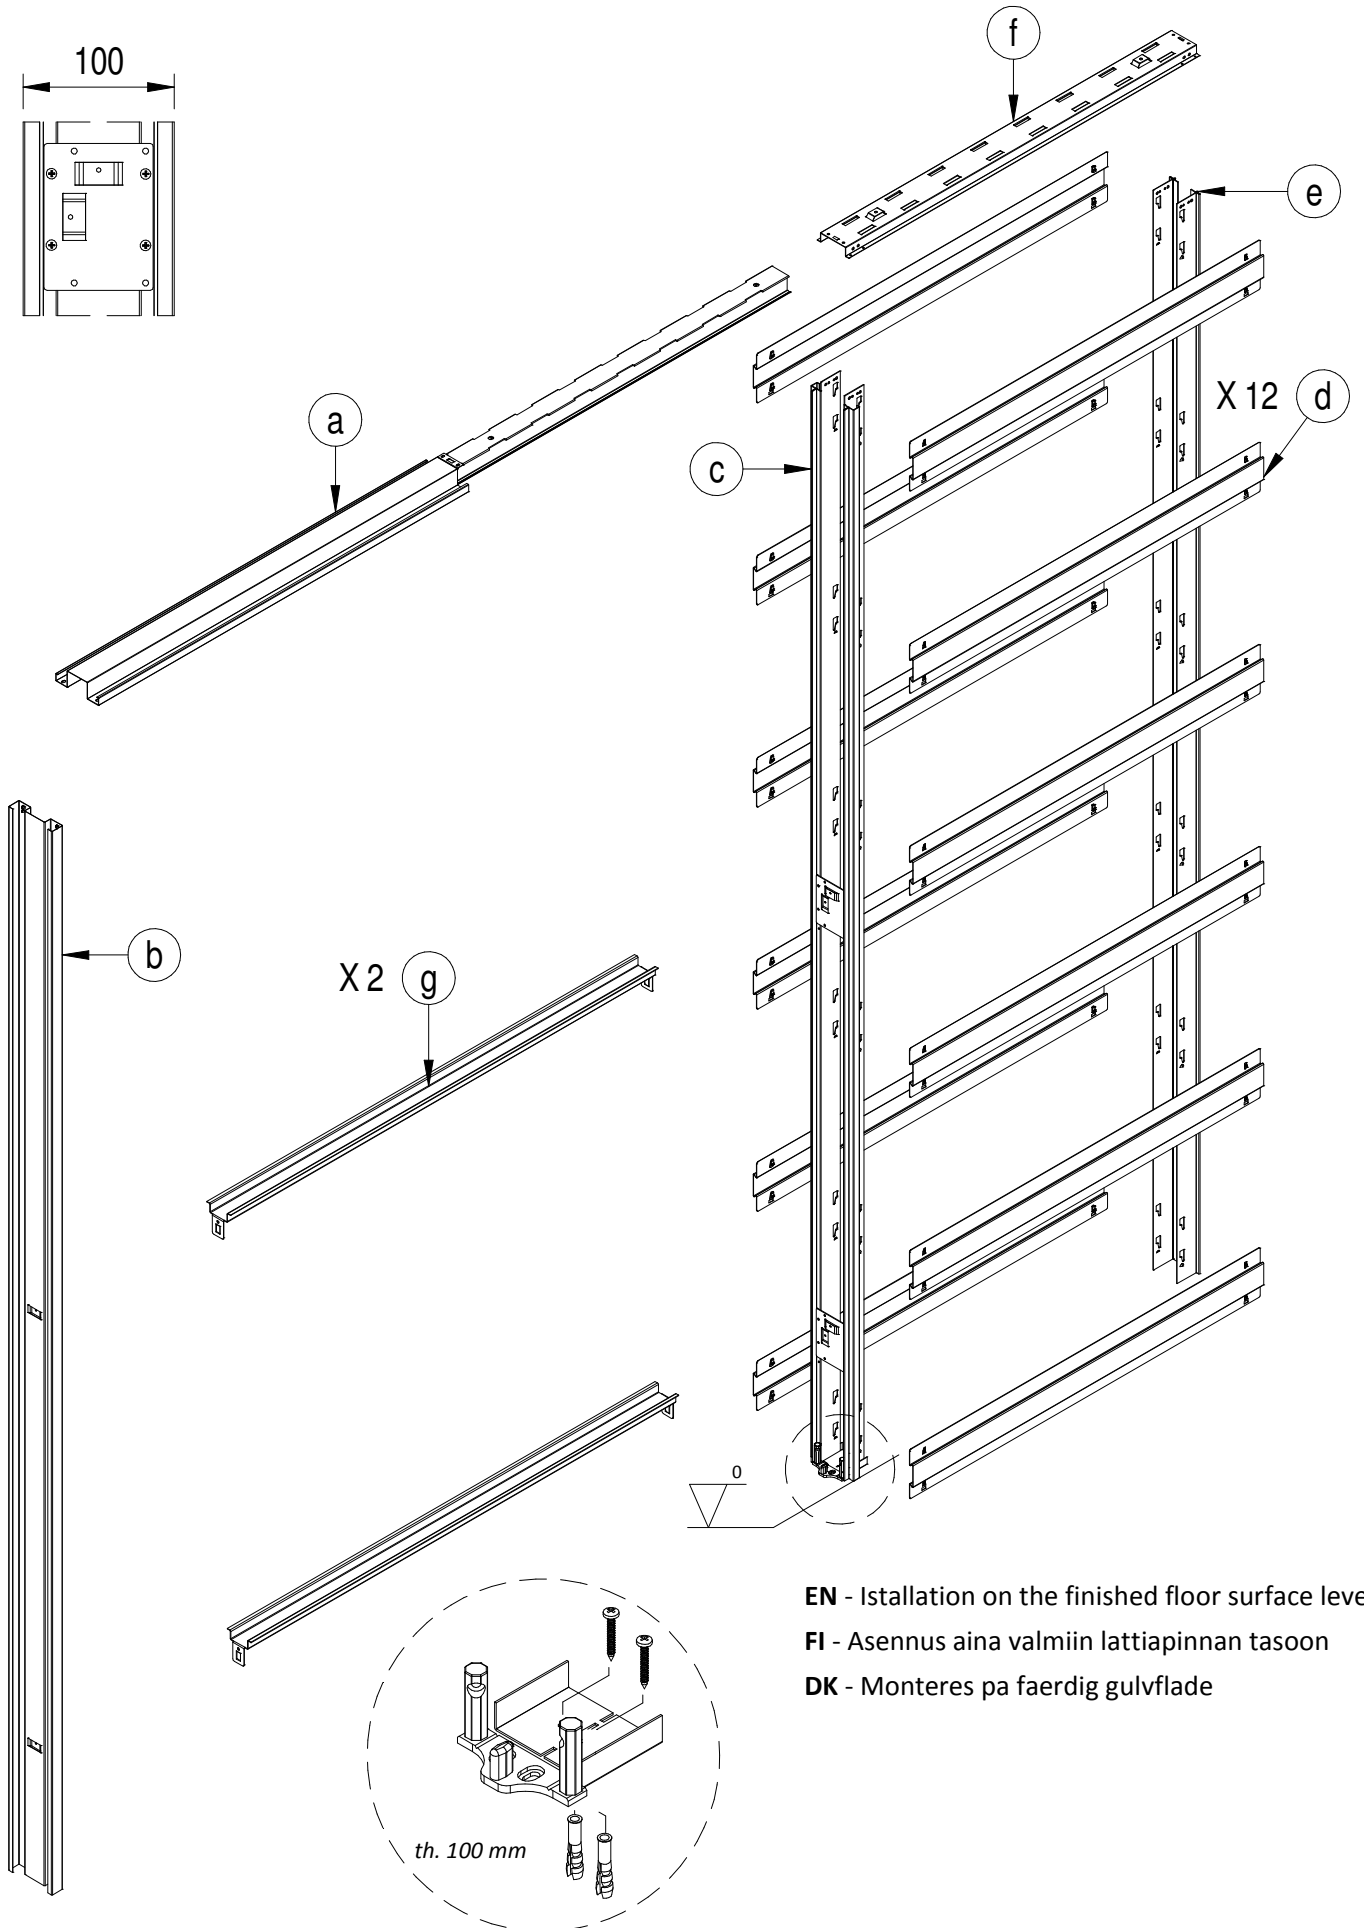


Evokit 100

1


Front

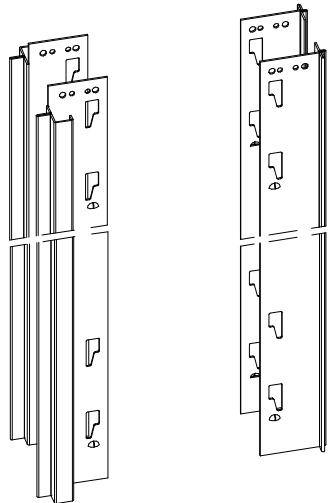

Back - Bag

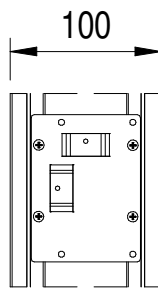


Front





Back - Bag


2

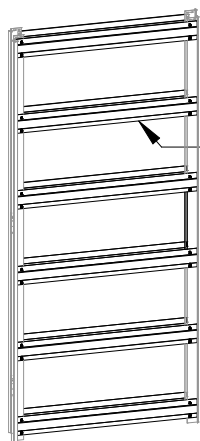


d (x 12)

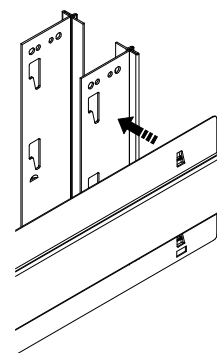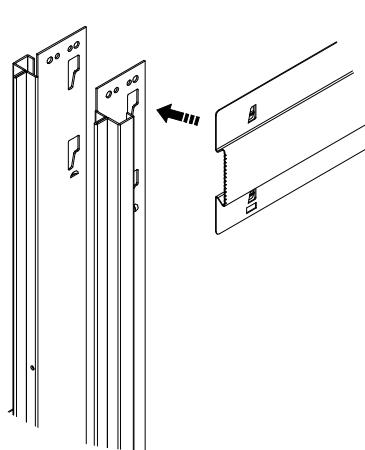


3

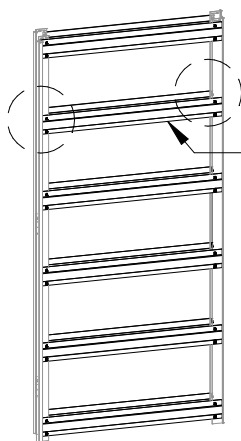

d (x 12)

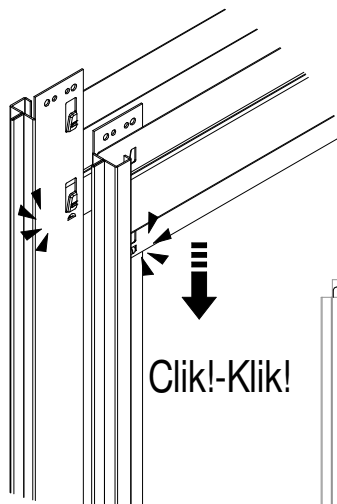


Klik!-Klik!

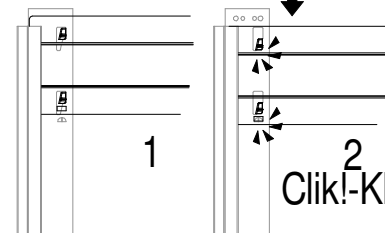


1

2
Klik!-Klik!

4

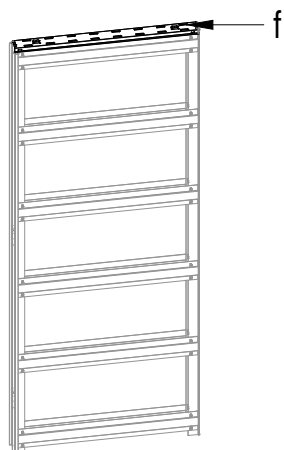




f

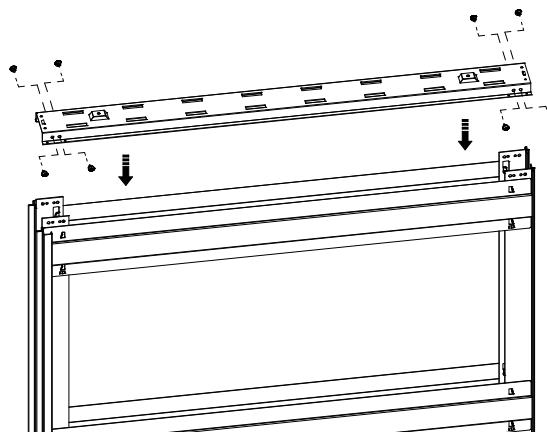




v3 = n° 8x 4,8x9,5




5

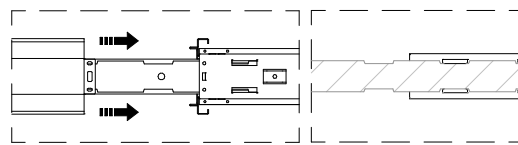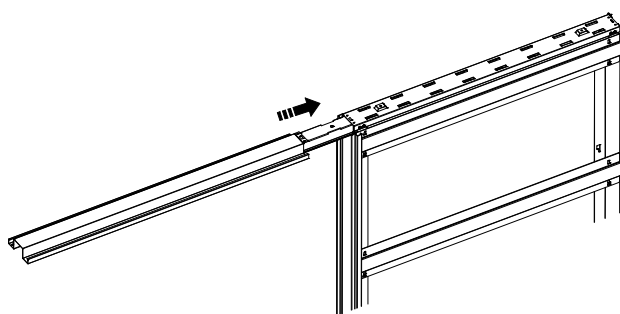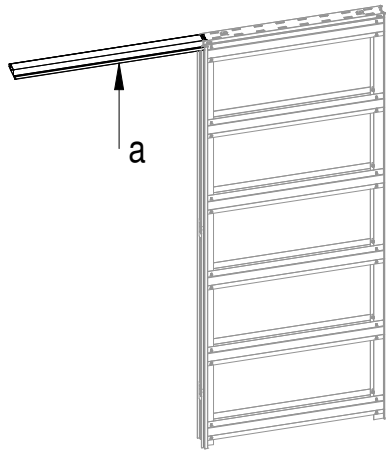



6

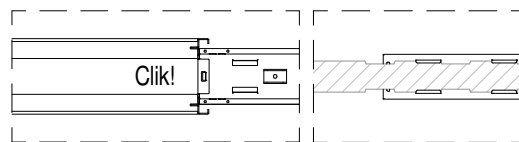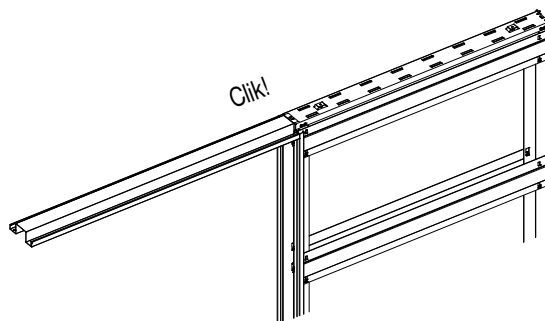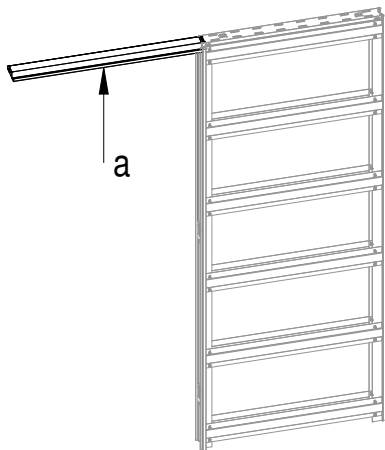



7

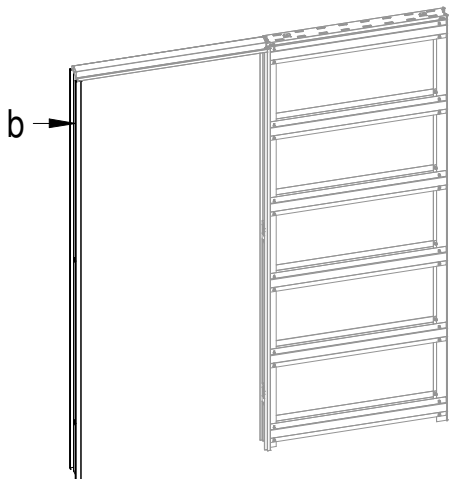

v5 = n° 2x 3,5x25

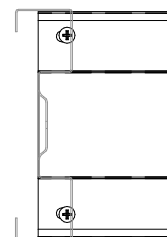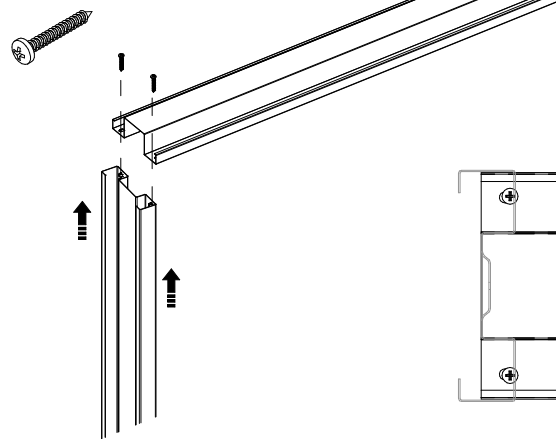




8

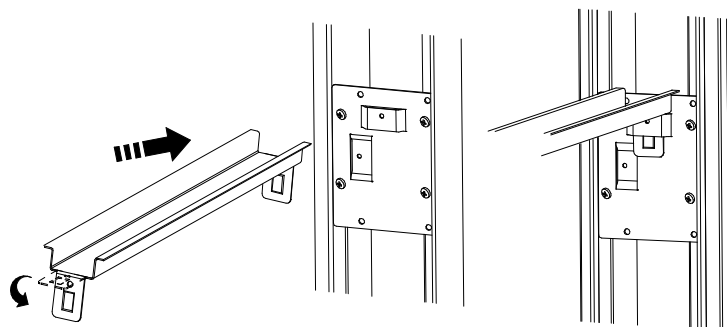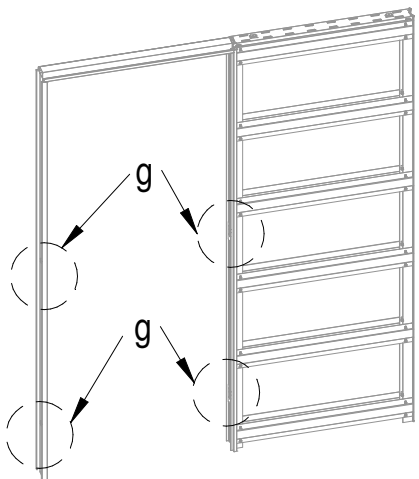


Evokit 100

Posizionamento su tramezzo - Framing - Montage

Installation sur structure placo - Fijacion de la estructura - Ovikeyksen sijoittaminen seinärakenteeseen

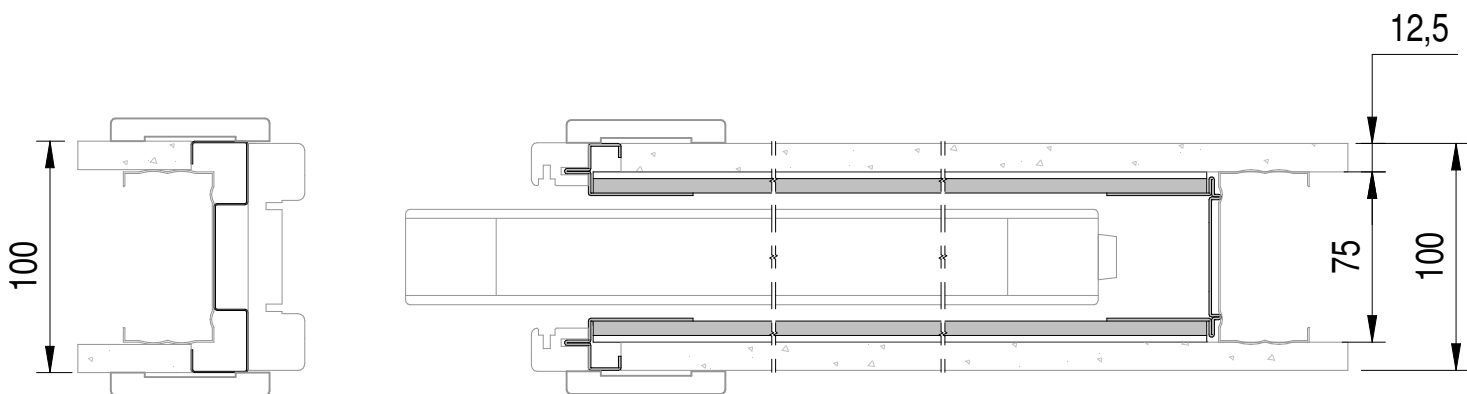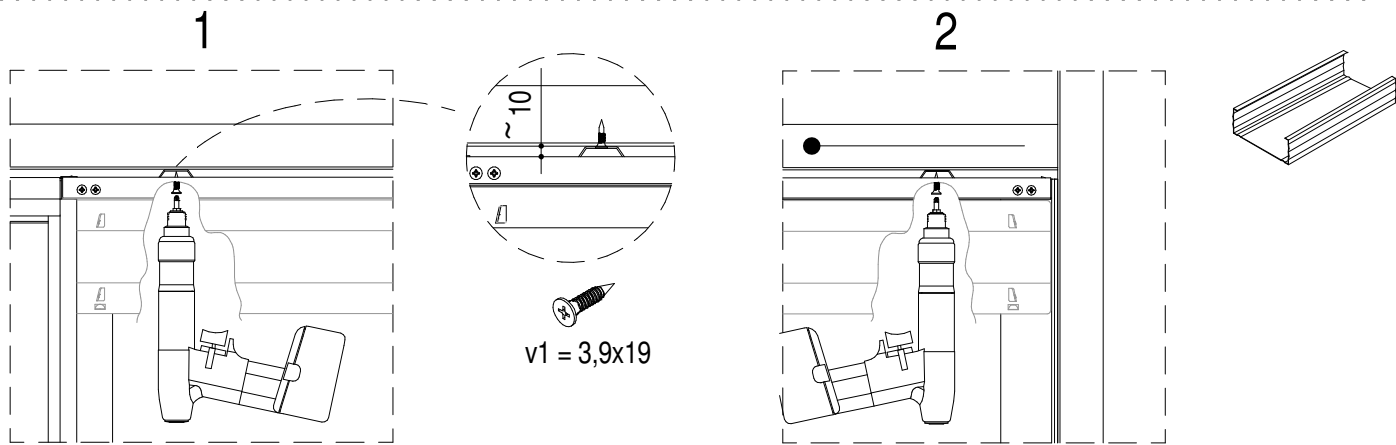
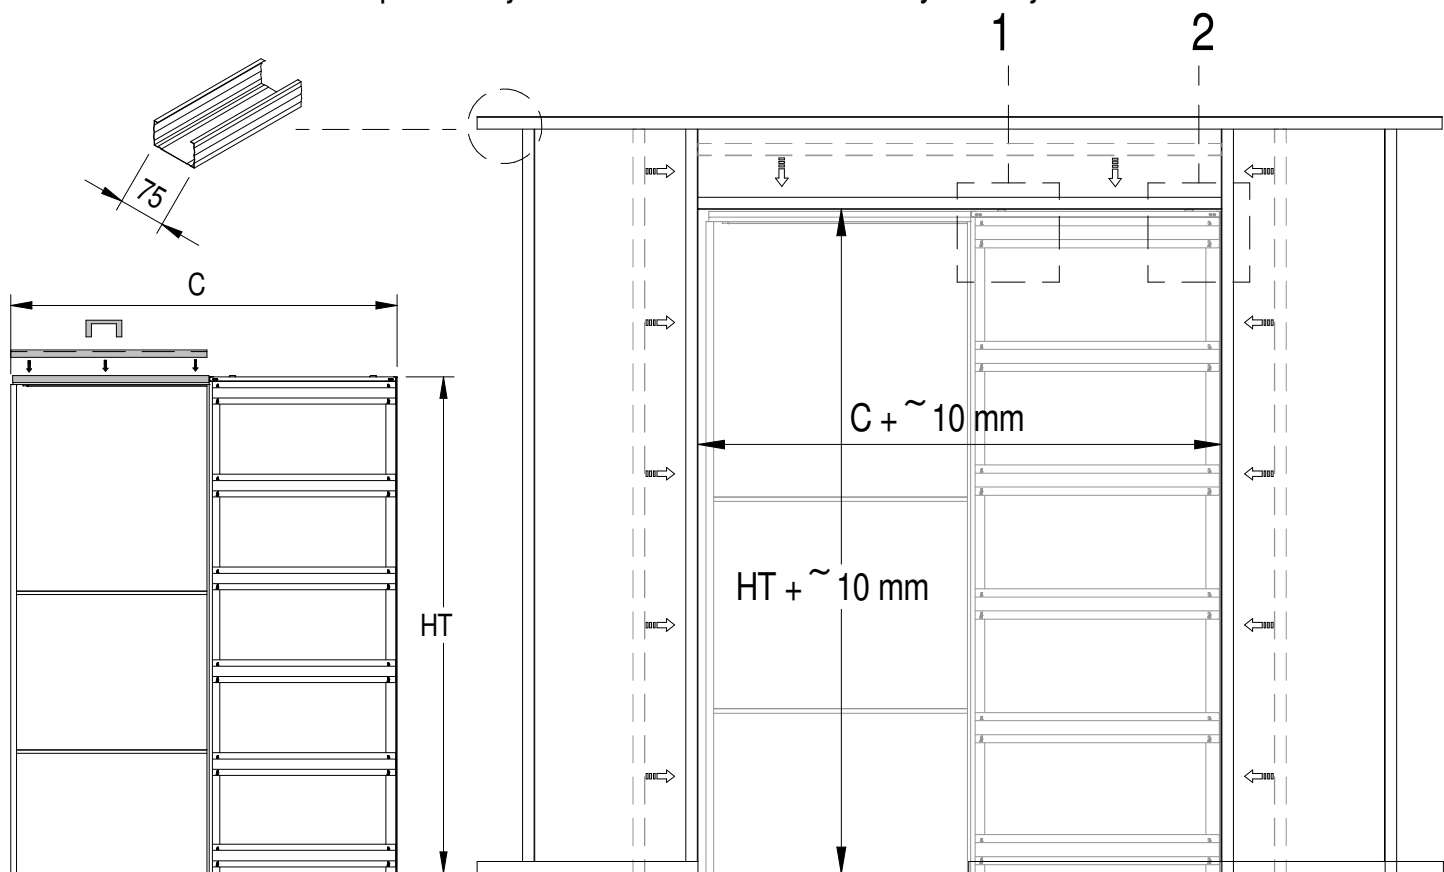


Evokit 125


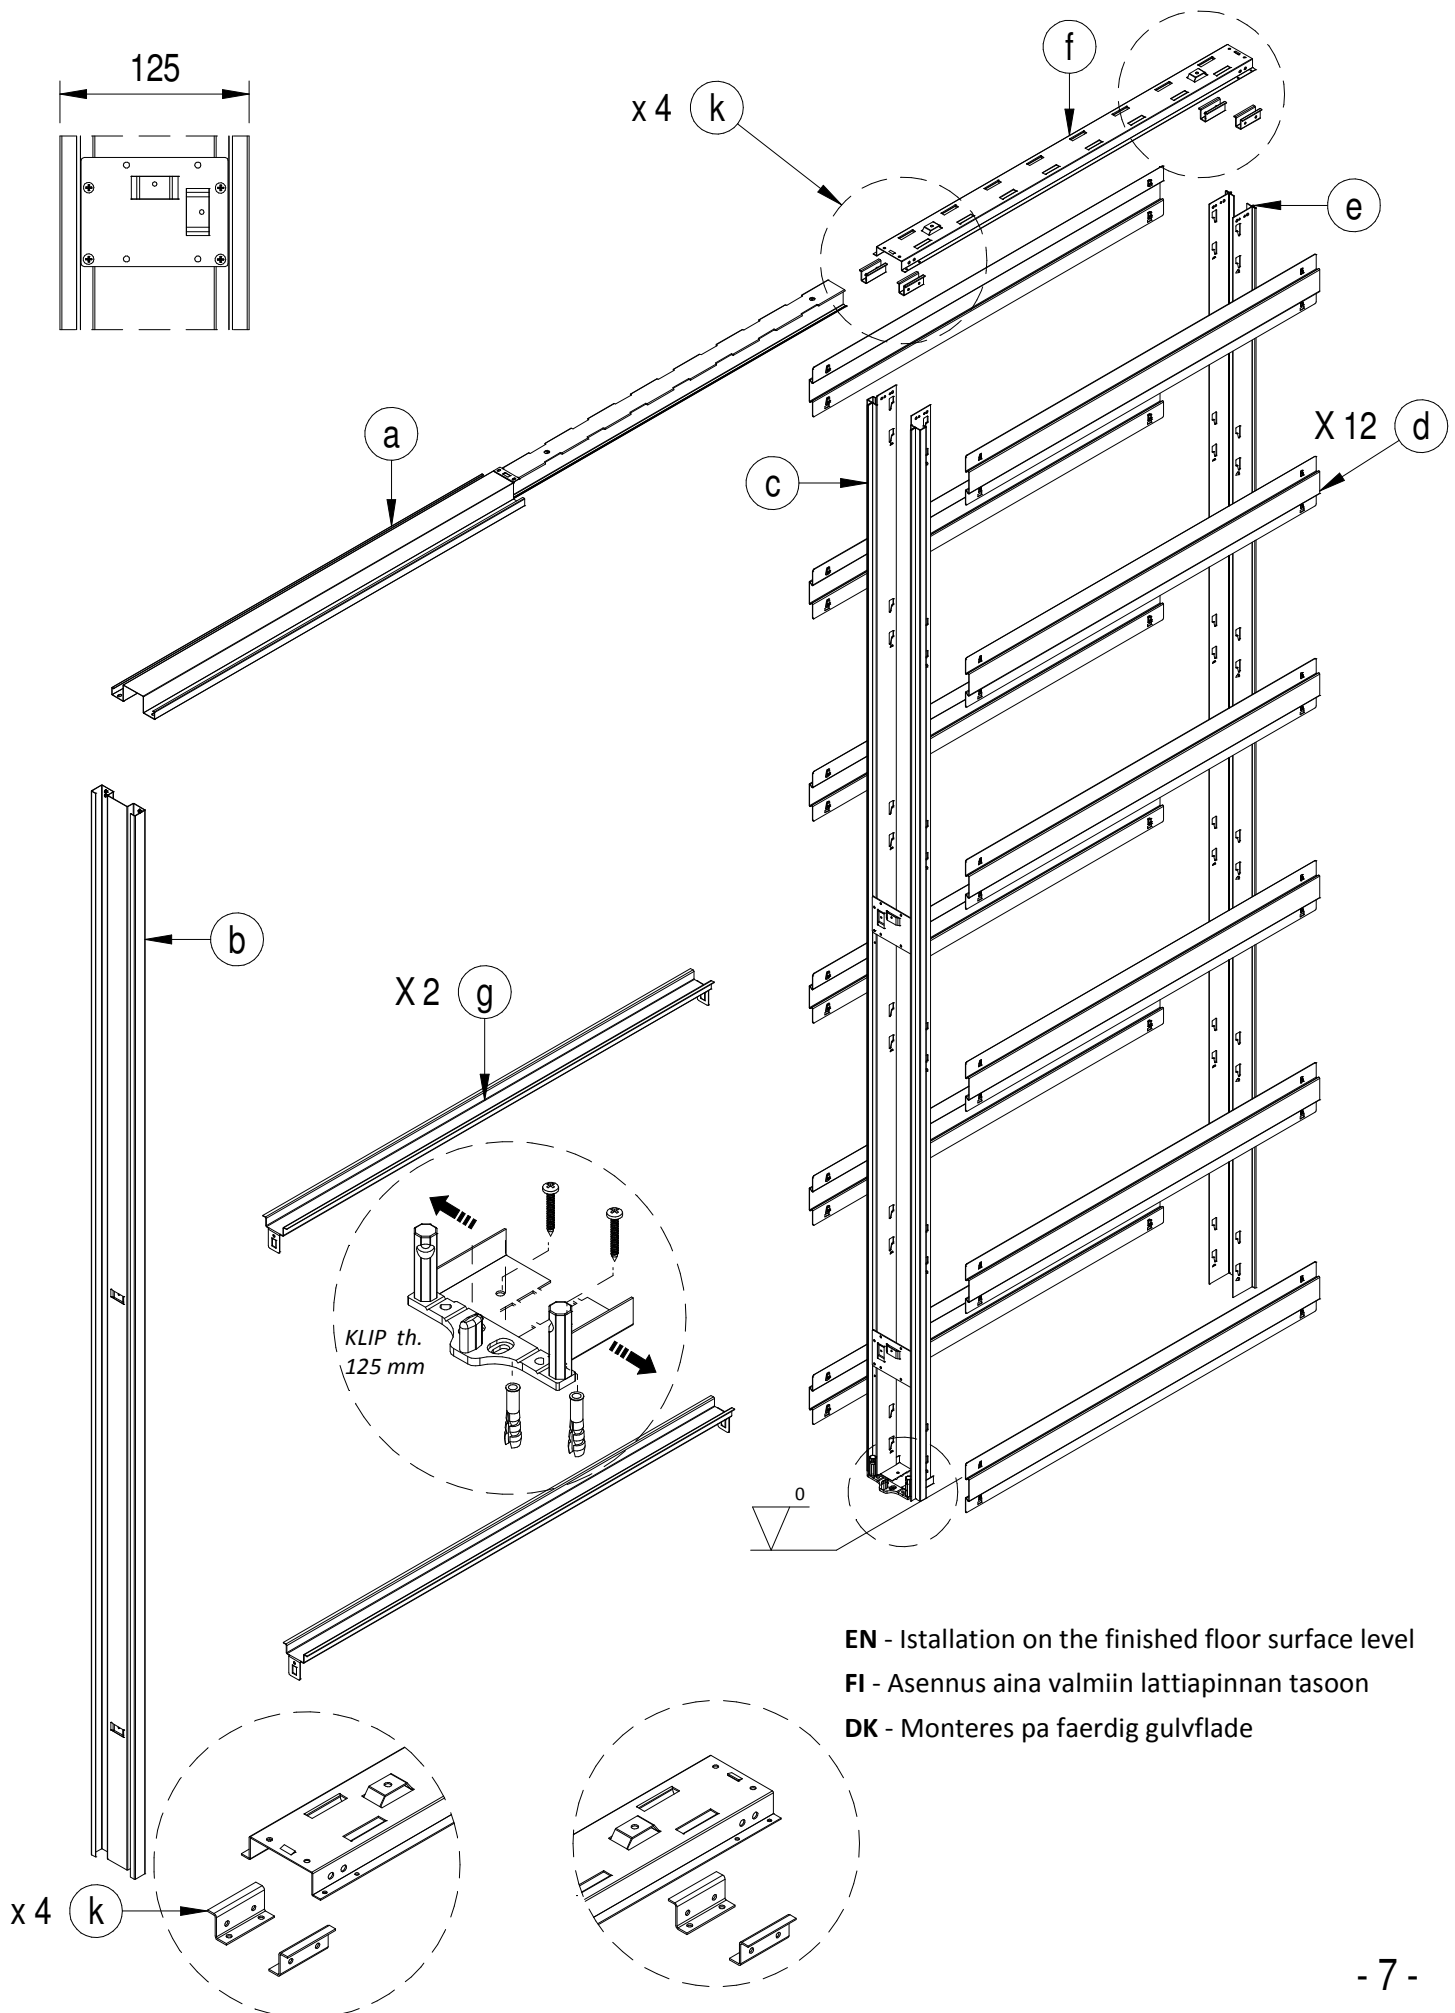


Evokit 125



1.1

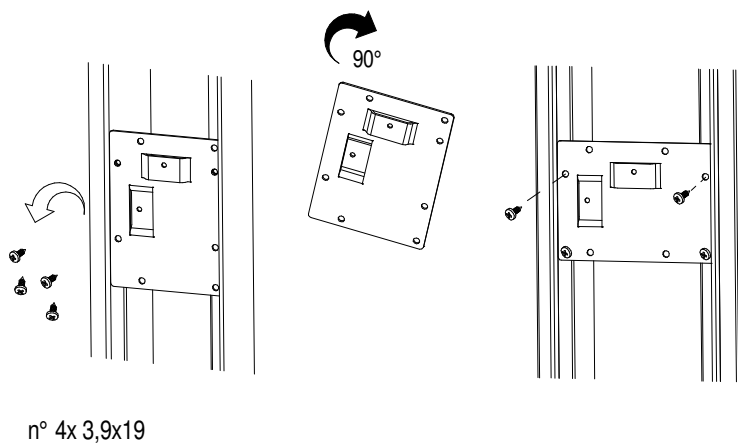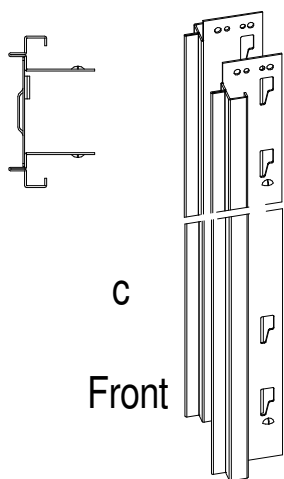



2.1

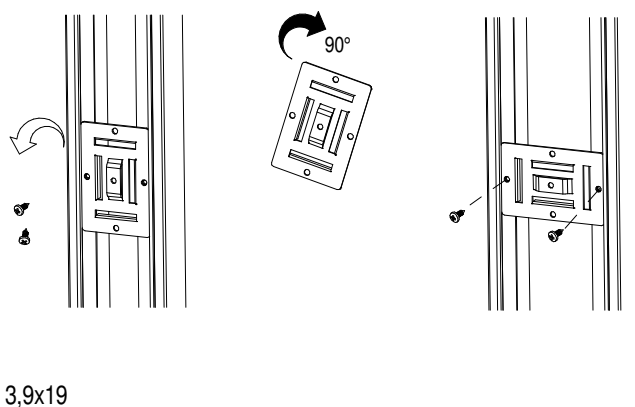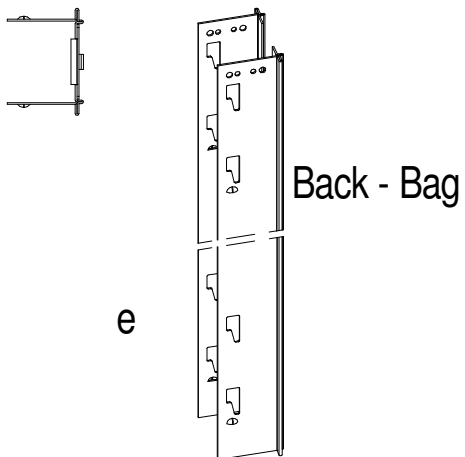

3.1


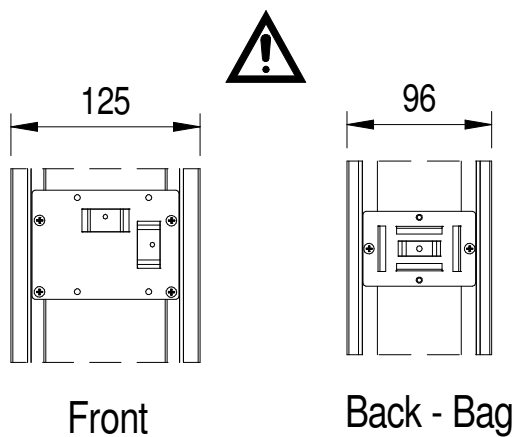
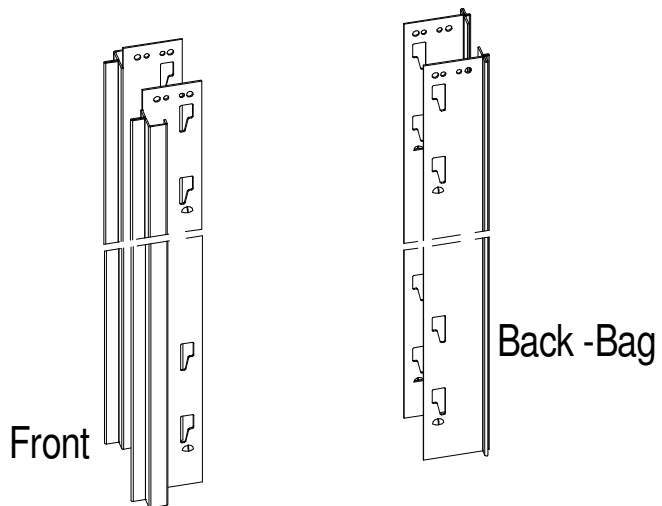


4.1

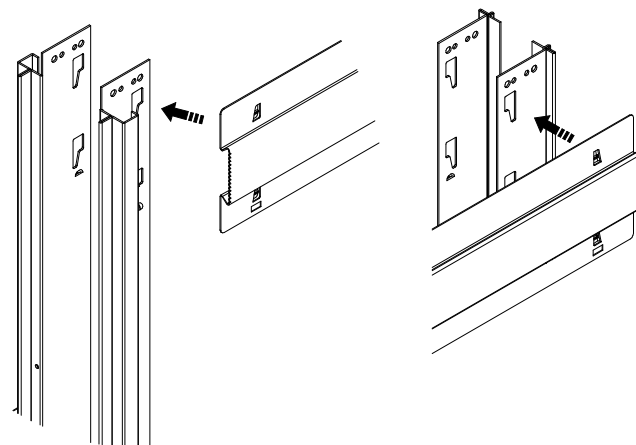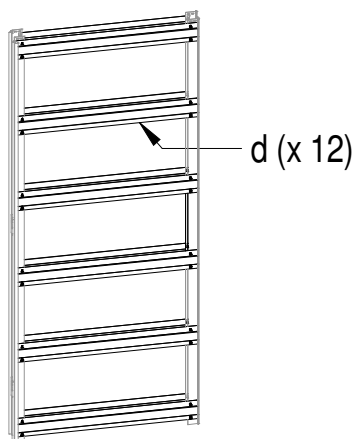


Evokit 125



5.1

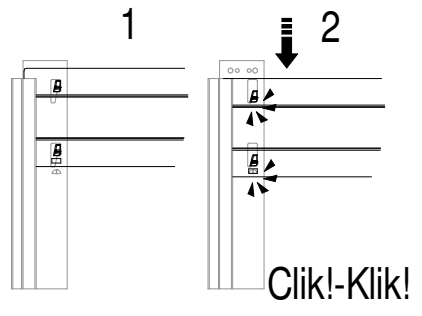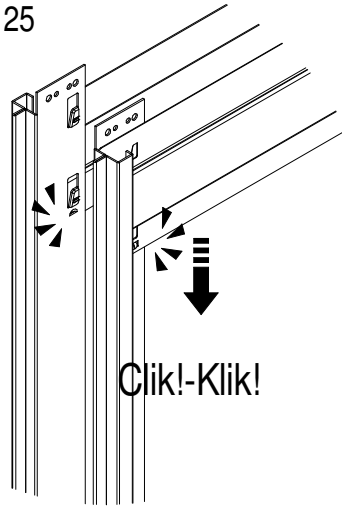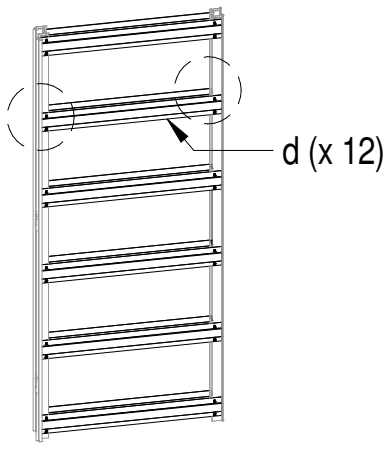



6.1

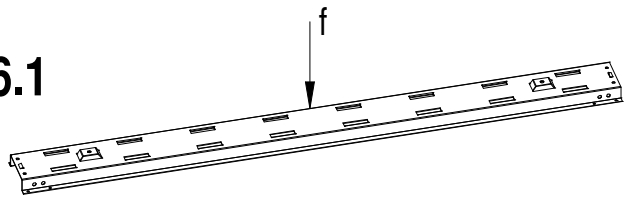

v2 = n° 8x 3,9x9,5

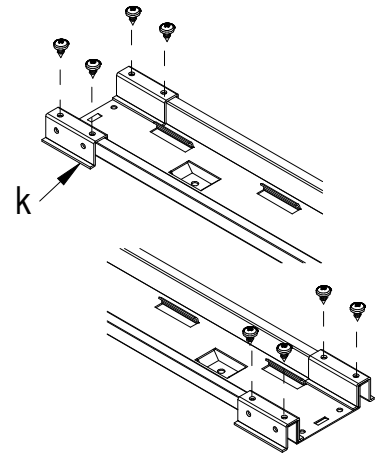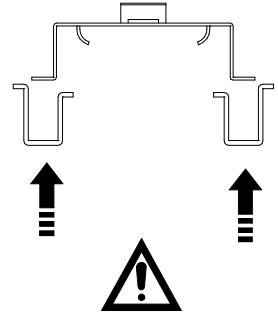




7.1

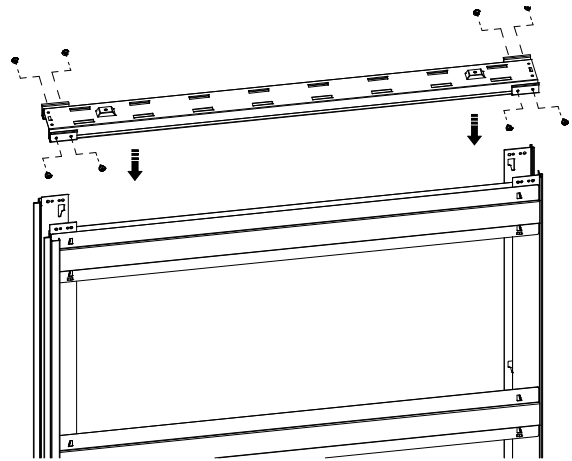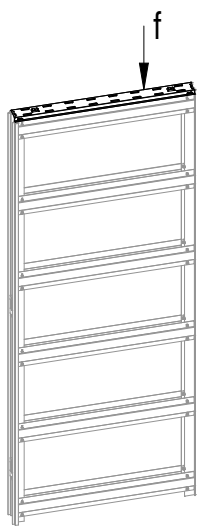




v3 = n° 8x 4,8x9,5




8.1

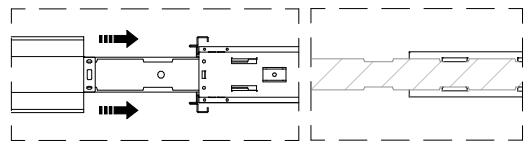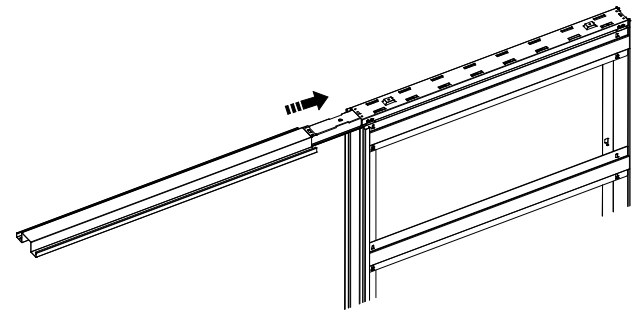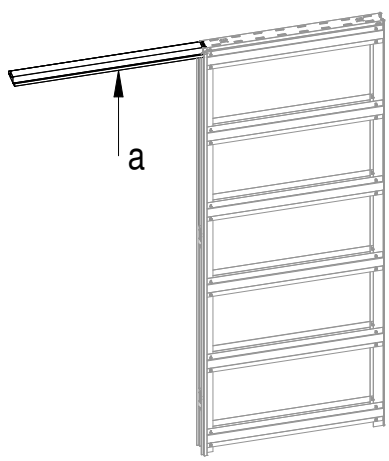



9.1

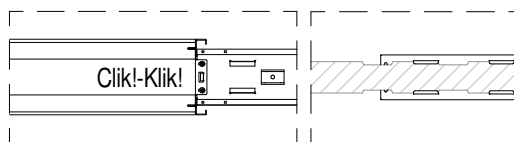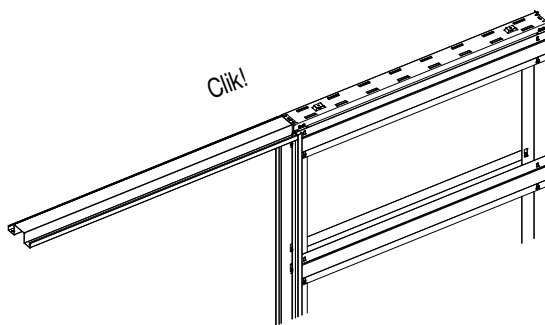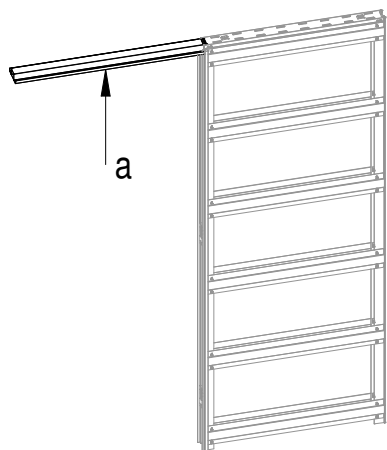



10.1

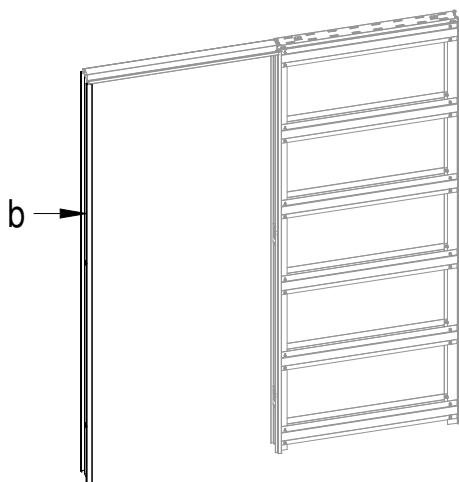

v5 = n° 2x 3,5x25

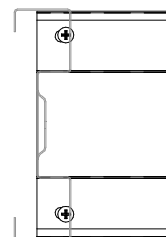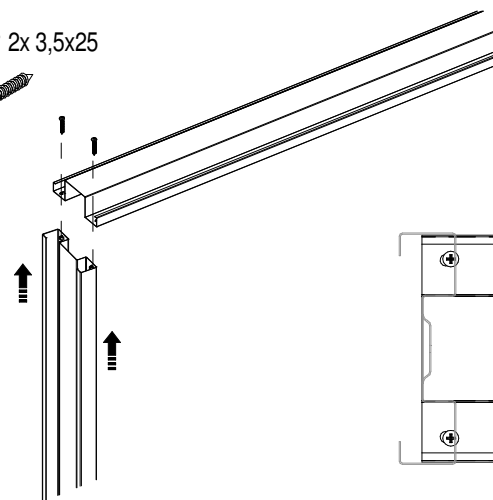




11.1

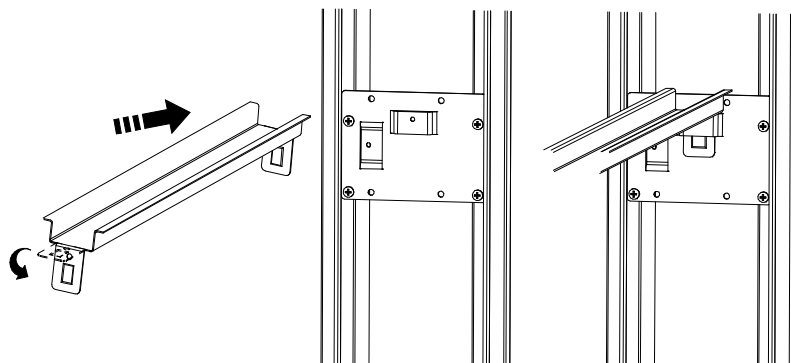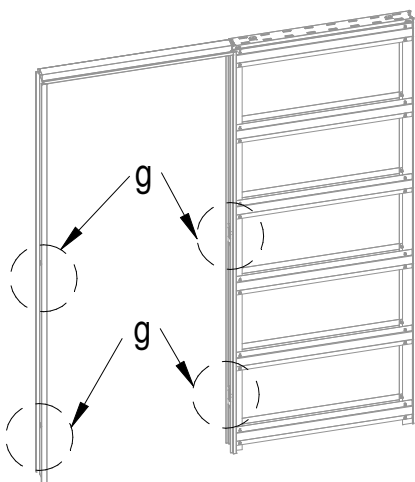




Evokit 125

Posizionamento su tramezzo - Framing - Montage

Installation sur structure placo - Fijacion de la estructura - Ovikeyksen sijoittaminen seinärakenteeseen

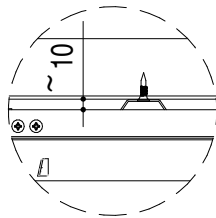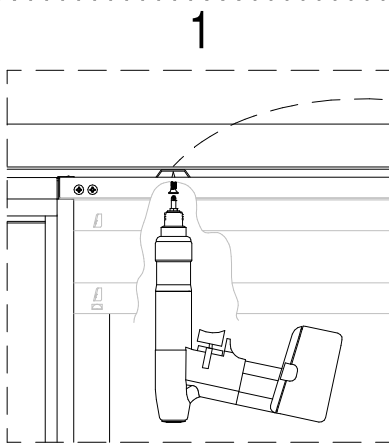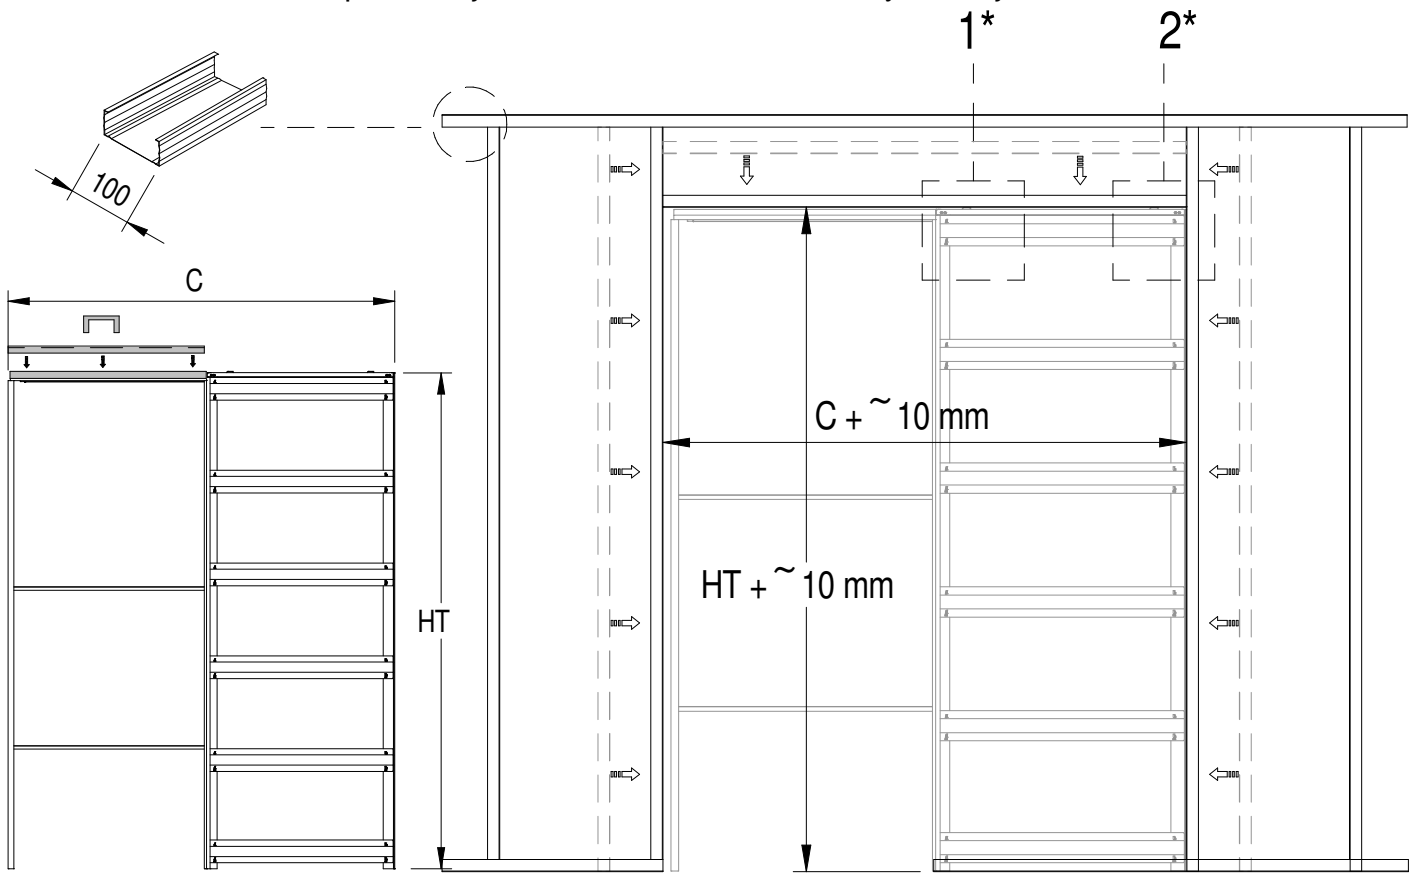

v1 = 3,9x19

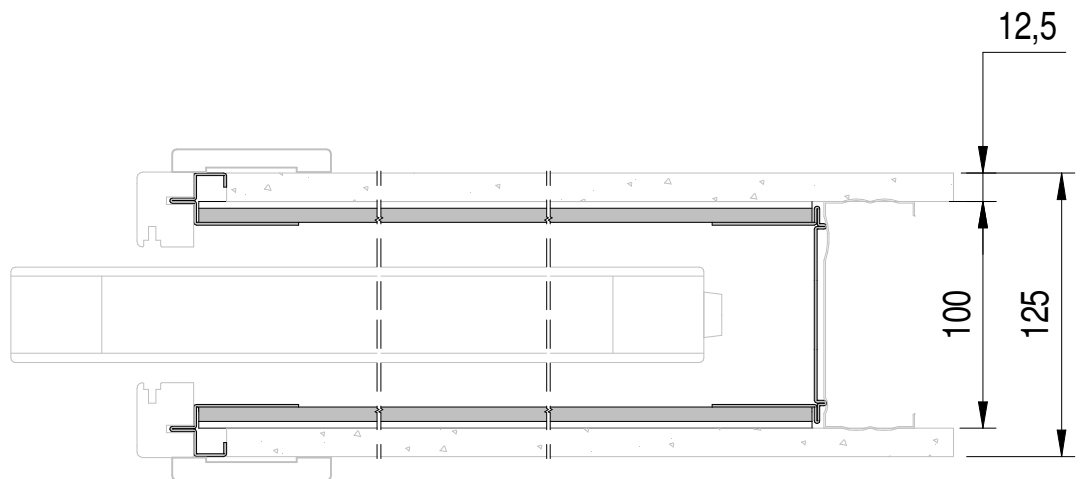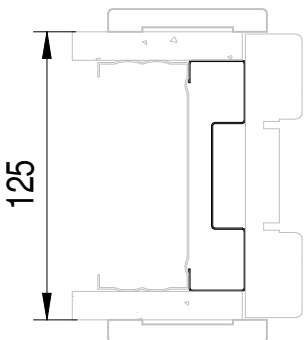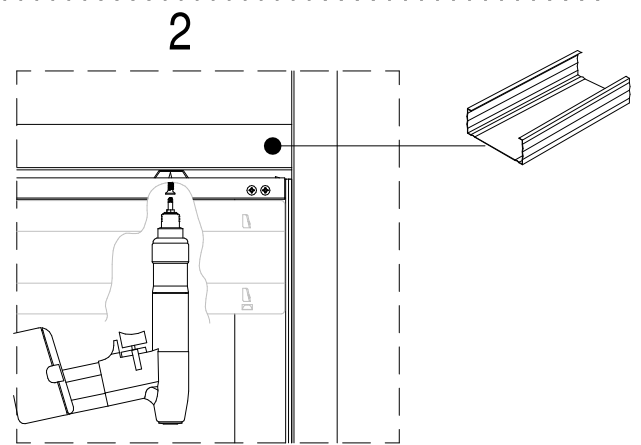



www.safco.dk | info@safco.dk | Phone : +45 8682 6677